


# How to Start Silky Rider

Please plug the adaptor to the wall outlet and connect it to the Silky Rider, then switch it on, please follow up these steps:

1



Welcome  
My name is Silky Rider  
I was born in California USA

If you are seeing this page  
it means this device is  
brand new

Please wait while  
I am starting

Loading

At the first page Silky Rider announces that it is a brand new device for the first time you switch it on, the systems start loading, please wait

2

Time Setting

HH MM SS

00 00 00

Save & Continue

At this page click on the hour, minute and second boxes one by one to enter the values for the exact time, then click on "Save & Continue" button.

Please use the 24 hour clock format.

3

**Day / Night**

Start	HH	MM	SS
Day	06	00	00
Night	18	00	00

**Save & Continue**

At the this page click on the day and night hour, minute and second boxes one by one to enter your desired time, by default it is from 6:00 to 18:00, then click on "Save & Continue" button.

4

**Direction**

Please click here


If curtain opens or remain opens leave this page otherwise click below

**Correct Direction**

**Save & Continue**


At this page first click on the "Please click here" button, if the curtain opens or remains open click on the "Save & Continue" button, if not click on the "Correct Direction" button, then "Save & Continue" button.

5

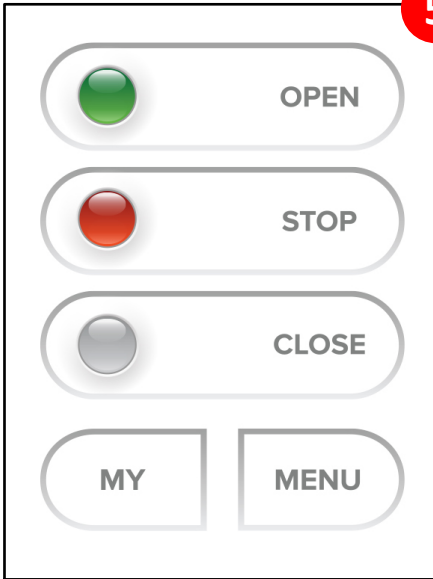

This is the Operation page.  
Silky Rider can be controlled  
from this page as well.

6

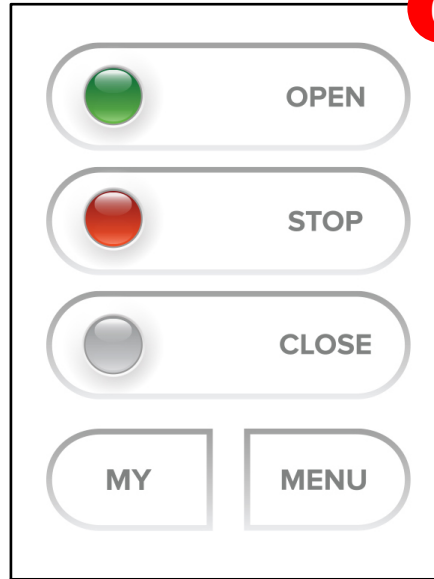

To manage the systems  
please click on Menu and  
enter "1234"